




A. SET STAKES NO MORE THAN 3' APART AND DRIVE THEM INTO THE GROUND AT LEAST 8".

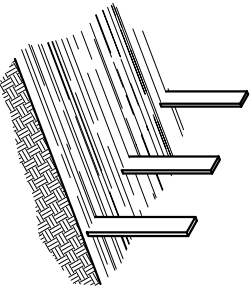




B. EXCAVATE A 4" x 4" TRENCH UP SLOPE ALONG THE LINE OF STAKES.

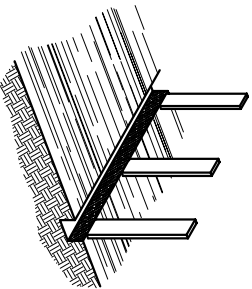

C. STAPLE FILTER MATERIAL ON UP SLOPE SIDE OF STAKES AND EXTEND IT INTO THE TRENCH. WHEN JOINTS ARE NECESSARY, OVERLAP MATERIAL BETWEEN 2 STAKES AND FASTEN SECURELY.

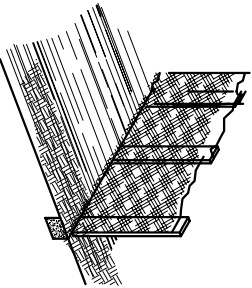

D. BACKFILL AND COMPACT THE EXCAVATED SOIL.

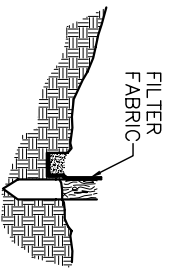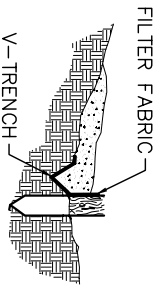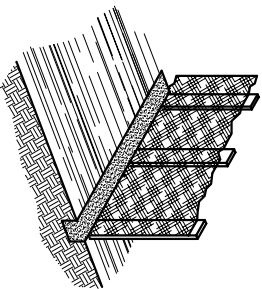

SILT FENCE
TEMPORARY EROSION CONTROL

REVISIONS:
AUG. 1999

DATE
APPROVED:
MAY 1997

PAGE No.
600-13